


Ensure that trench drains are set no higher than 1/8 inch above slab.

When backfilling the slab leave a gap around the trench drain with no concrete.

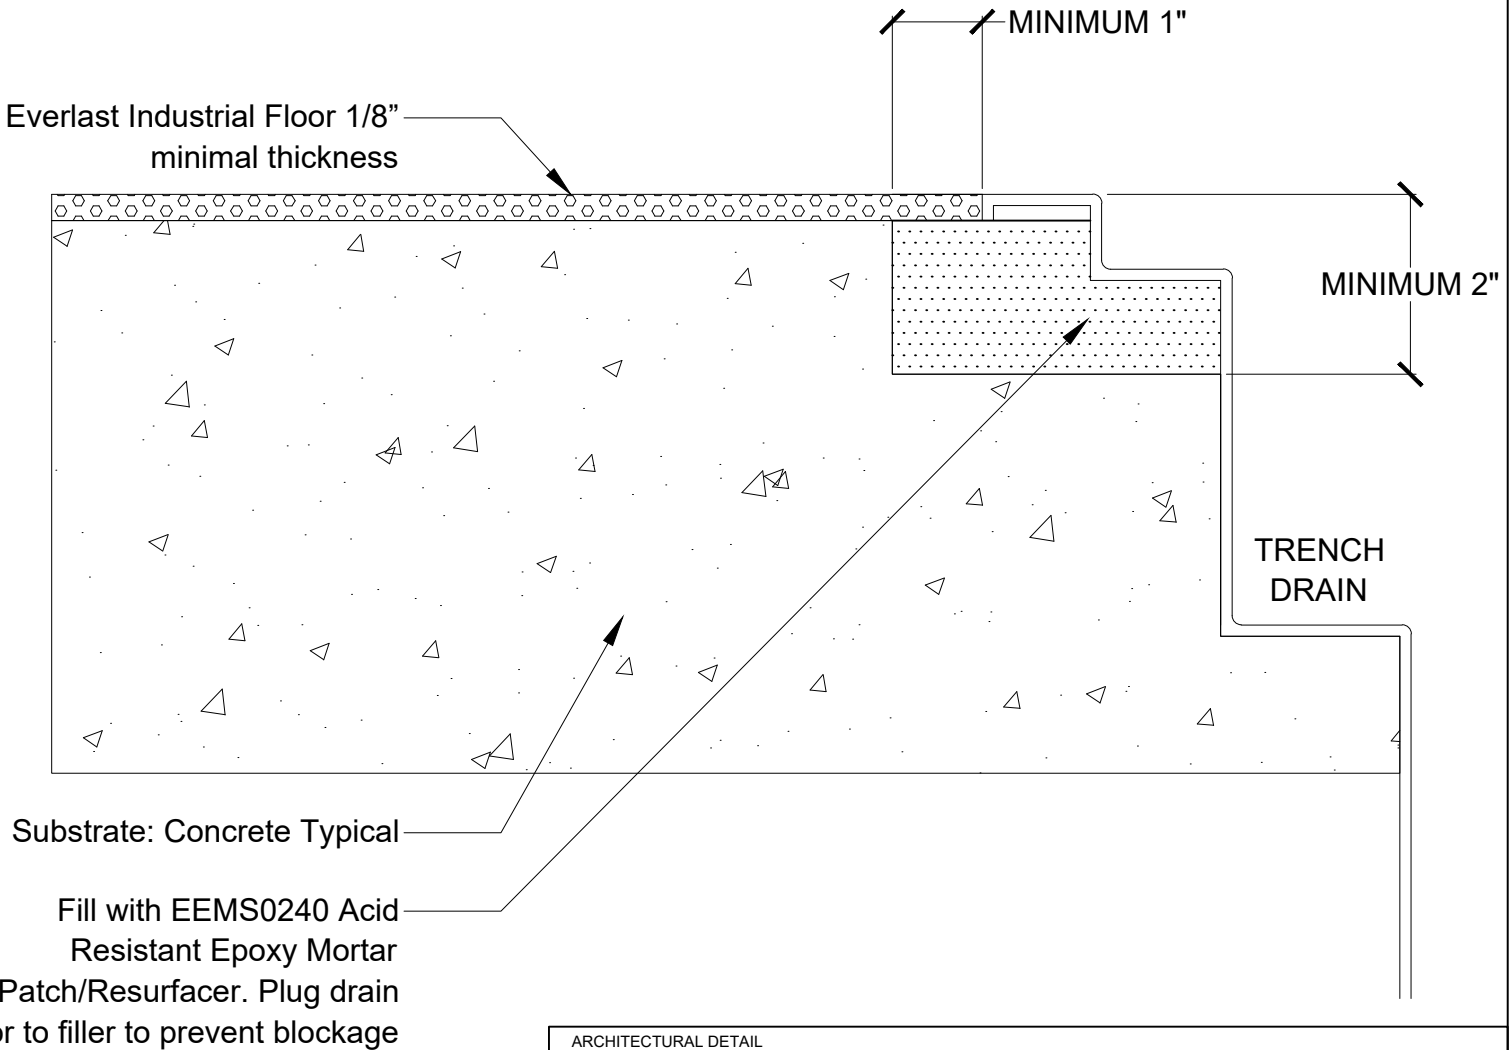

ARCHITECTURAL DETAIL

Everlast Industrial Floor waterproof trench drain detail



Healthy ● Durable ● Attractive

803 S Garden St, Columbia, TN 38401
Phone: (800) 708-9870
Email: care@everlastepoxy.com
www.everlastepoxy.com

SCALE
Not to Scale

DATE
2025.05.29

DRAWING NUMBER
EI-Drain-02